

To prevent accidents arising from the misuse of this instrument, please ensure the operator receives this manual.

SAFETY PRECAUTIONS

- To ensure safe and correct use, thoroughly read and understand this manual before using this instrument.
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after consulting purpose of use with our agency or main office. (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protection equipment against excessive temperature rise, etc. must be installed, as malfunction of this product could result in serious damage to the system or injury to personnel. Also proper periodic maintenance is required.
- This instrument must be used under the conditions and environment described in this manual. Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.

Caution with respect to Export Trade Control Ordinance

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument. In the case of resale, ensure that this instrument is not illegally exported.

Caution

- This instrument should be used in accordance with the specifications described in the manual. If it is not used according to the specifications, it may malfunction or cause fire.
- Be sure to follow the warnings, cautions and notices. Not doing so could cause serious injury or malfunction.
- Specifications of the JIR-301-M and the contents of this instruction manual are subject to change without notice.
- This instrument is designed to be installed within a control panel. If this is not the case, measures must be taken to ensure that the operator cannot touch power terminals or other high voltage sections.
- Be sure to turn the power supply to the instrument OFF before cleaning this instrument.
- Use a soft and dry cloth when cleaning the instrument. (If paint thinner is used, it might deform or tarnish the unit.)
- As the display section is vulnerable, do not strike or scratch it with a hard object.
- Any unauthorized transfer or copying of this document, in part or in whole, is prohibited.
- Shinko Technos CO., LTD. is not liable for any damages or secondary damages incurred as a result of using this product, including any indirect damages.

Characters used in this manual

| | | | | | | | | | | | | | |
|---------------|----|---|---|---|---|---|---|---|---|---|---|----|----|
| Indication | -1 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | °C | °F |
| Number, °C/°F | -1 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | °C | °F |
| Indication | A | B | C | D | E | F | G | H | I | J | K | L | M |
| Alphabet | A | B | C | D | E | F | G | H | I | J | K | L | M |
| Indication | N | O | P | Q | R | S | T | U | V | W | X | Y | Z |
| Alphabet | N | O | P | Q | R | S | T | U | V | W | X | Y | Z |

1. Model name

1.1 Model name

| | | | | |
|--------------|--------------------------|----------------------------------|--------------------------|---|
| JIR-301-M | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Series name: JIR-301-M (W96 x H48 x D100mm) |
| Input | M | : | : | Multi-range *1 |
| Power supply | 1 | : | : | 24V AC/DC *2 |
| Option | TA *3 | Specified transmission output | DC current output | 0 to 20mA DC |
| | TV | | DC voltage output | 0 to 1V DC 0 to 5V DC 1 to 5V DC 0 to 10V DC |
| | C5 | Serial communication (RS-485) *4 | | |
| | P24 | Isolated power output *5 | | |
| | BK | Color, Black | | |
| TC | Terminal cover | | | |

A1, A2 and A3 alarm outputs are provided as standard for the JIR-301-M.

Alarm actions (5 types and No alarm action) and Energized/Deenergized can be selected by keypad.

*1: An input type can be selected out of TC (10 types), RTD (2 types), DC current (2 types) and DC voltage (4 types) by keypad.

*2: Supply voltage 100 to 240V AC is standard. When ordering 24V AC/DC, enter "1" after the input code.


*3: **TA (4 to 20mA DC) is equipped as standard.**

*4: If the option serial communication is added, HOLD function is not available.


*5: If the option isolated power output is added, A2 output is not available.

1.2 How to read the model name label

Model name labels are attached to the case and the inner assembly.

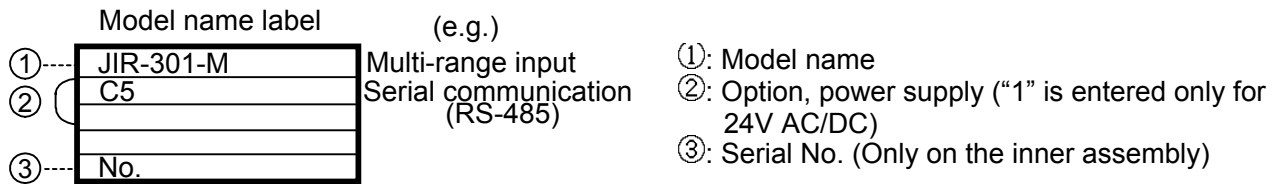

2. Name and functions of the sections

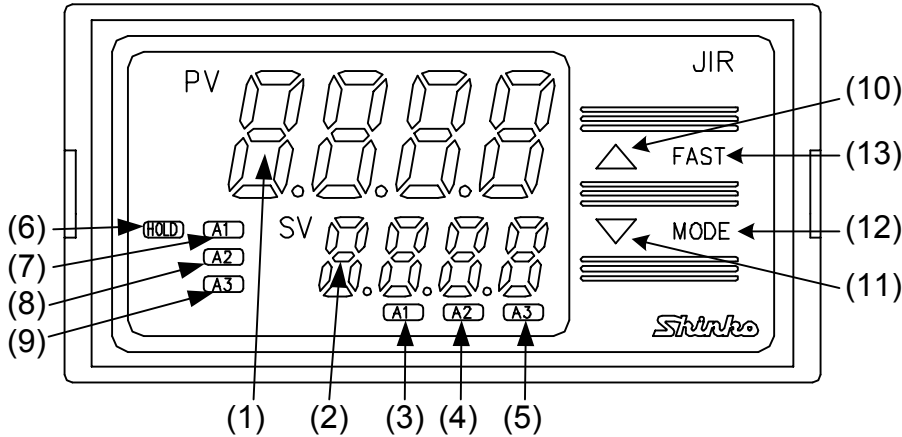

- (1) **PV display:** Indicates the input value with a red LED.
- (2) **SV display:** Indicates the setting value with a green LED.
- (3) **A1 action indicator:** When A1 output is ON, a red LED lights up.
- (4) **A2 action indicator:** When A2 output is ON, a red LED lights up.
- (5) **A3 action indicator:** When A3 output is ON, a red LED lights up.
- (6) **HOLD indicator:** When PV HOLD (Hold, Peak hold, Bottom hold) output is ON, a yellow LED lights up.
- (7) **A1 setting indicator:** When A1 setting is indicated, a green LED lights up.
- (8) **A2 setting indicator:** When A2 setting is indicated, a green LED lights up.
- (9) **A3 setting indicator:** When A3 setting is indicated, a green LED lights up.
- (10) **Increase key:** Increases the numeric setting value.
- (11) **Decrease key:** Decreases the numeric setting value.
- (12) **MODE key:** Selects the setting mode or registers the setting value.
(To register the setting value or selected value, press the MODE key)
- (13) **FAST key:** Makes the setting value change faster while holding down Increase or Decrease key together.

Notice

When setting the specifications and functions of this instrument, connect terminals 2 and 3 for power source first, then set them referring to "5. Setup" before performing "3. Mounting to control panel" and "4. Wiring".

3. Mounting to control panel


3.1 Site selection

This instrument is intended to be used under the following environmental conditions (IEC61010-1): Overvoltage category II, Pollution degree 2

Ensure the mounting location corresponds to the following conditions:


- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gases
- Few mechanical vibrations or shocks
- No exposure to direct sunlight, an ambient temperature of 0 to 50°C (32 to 122°F) that does not change rapidly
- An ambient non-condensing humidity of 35 to 85%RH
- No large capacity electromagnetic switches or cables through which large current is flowing
- No water, oil or chemicals or where the vapors of these substances can come into direct contact with the instrument

3.2 External dimensions

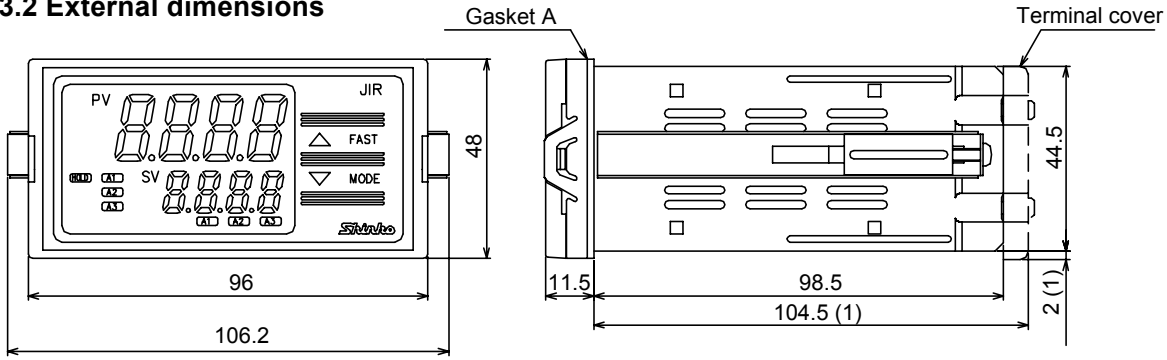

(Fig. 3.2-1)

3.3 Panel cutout

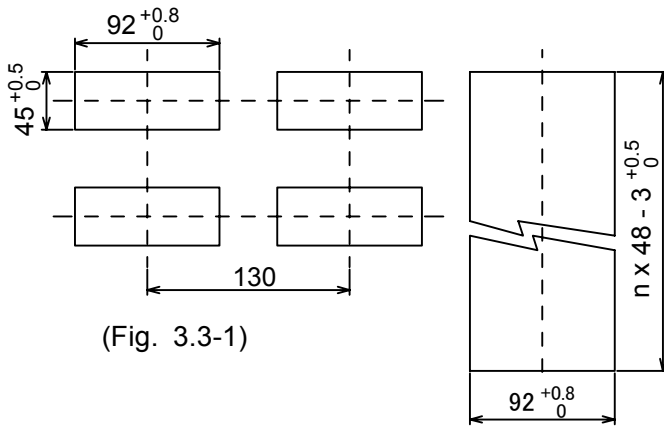

(Fig. 3.3-1)

Lengthwise close mounting
n: Number of units mounted

⚠Caution: If lengthwise close mounting is used for the instrument, IP66 specification will not be fulfilled.


3.4 Mounting

Mount the instrument vertically to fulfill the Dust-proof/Drip-proof specification (IP66).

Mountable panel thickness: Within 1 to 15mm

Insert the instrument from the front side of the panel.

Attach the screw type mounting brackets by the holes at the top and bottom of the case and secure the instrument in place with the screws.

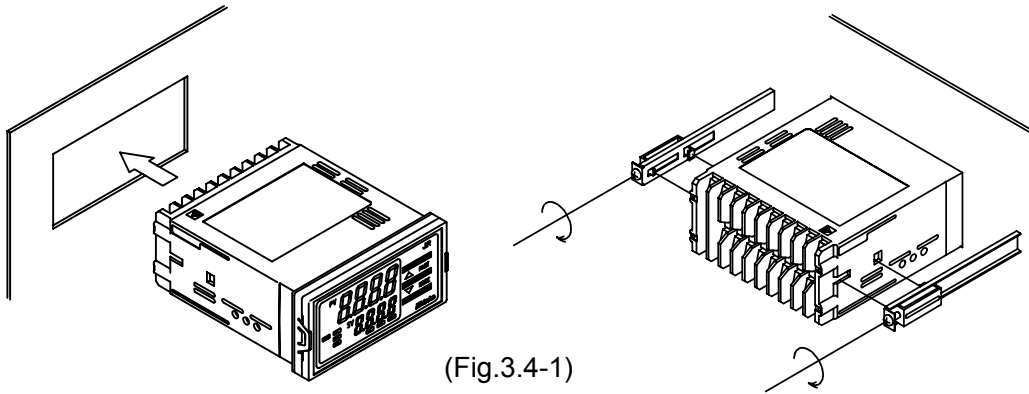

(Fig.3.4-1)


⚠ Warning

As the case is made of resin, do not use excessive force while screwing in the mounting bracket, or the case or screw type mounting bracket could be damaged.
The torque is approximately 0.12N·m.

4. Wiring

⚠ Warning

Turn the power supply to the instrument off before wiring or checking it.
Working or touching the terminal with the power switched on may result in severe injury or death due to Electric Shock.

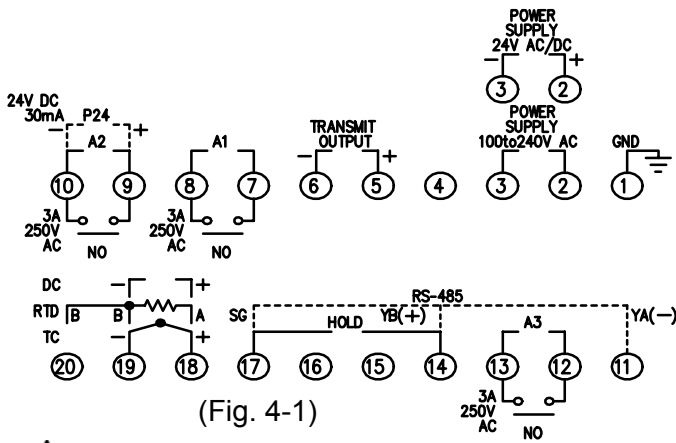

- A1 : Alarm 1 output
- A2 : Alarm 2 output
- A3 : Alarm 3 output
- TRANSMIT OUTPUT: Transmission output
- P24 : Isolated power output
- HOLD : HOLD function
- RS-485: Serial communication (RS-485)
- TC : Thermocouple
- RTD : Resistance temperature detector
- DC : DC current, DC voltage
- Dotted lines: Options.

(Fig. 4-1)


! Notice

- The terminal block of the JIR-301-M is designed to be wired from the upper side. The lead wire must be inserted from the upper side of the terminal, and fastened by the terminal screw.
- Use a thermocouple and compensating lead wire in accordance with the sensor input specification of this instrument.
- Use the 3-wire RTD which corresponds to the input specification of this instrument.
- This instrument does not have built-in power switch, circuit breaker or fuse. Therefore, it is necessary to install them in the circuit near the external instrument.
(Recommended fuse: Time-lag fuse, rated voltage 250V AC, rated current 2A)
- **When using a 24V AC/DC for the power source, do not confuse the polarity when it is DC.**
- When using a relay contact output type, externally use a relay according to the capacity of the load to protect the built-in relay contact.
- When wiring, keep input wires (thermocouple, RTD, etc.) away from AC sources or load wires to avoid external interference.
- Do not apply a commercial power source to the sensor connected to the input terminal nor allow the power source to come into contact with the sensor.

Lead wire solderless terminal

Use a solderless terminal with an isolation sleeve in which an M3 screw fits as shown below.

| Solderless terminal | Manufacturer | Model name | Tightening torque |
|---------------------|--|------------|-------------------|
| Y type | Nichifu Terminal Industries CO.,LTD. | 1.25Y-3 | 0.6N·m |
| | Japan Solderless Terminal MFG CO.,LTD. | VD1.25-B3A | Max. |
| Round type | Nichifu Terminal Industries CO.,LTD. | 1.25-3 | 1.0N·m |
| | Japan Solderless Terminal MFG CO.,LTD. | V1.25-3 | |



(Fig. 4-2)


5. Setup

Wire the power terminals only. After the power is turned on, the sensor input characters and temperature unit are indicated on the PV display and the input range high limit value is indicated on the SV display for approx. 3s. (Table 5-1) (If any other value is set during the Scaling high limit setting, the set value is indicated on the SV display) During this time, all outputs and the LED indicators are in an OFF status. Indication will then start and the input value will be indicated on the PV display and alarm setting value will be indicated on the SV display.

| Sensor input | PV display °C | SV display | PV display °F | SV display |
|--------------|---------------|--------------------------|---------------|--------------------------|
| K | e .C | 1310 | e .F | 2500 |
| | e .C | 4000 | e .F | 7500 |
| J | j .C | 1000 | j .F | 1800 |
| R | r .C | 1760 | r .F | 3200 |
| S | s .C | 1760 | s .F | 3200 |
| B | b .C | 1820 | b .F | 3300 |
| E | e .C | 800 | e .F | 1500 |
| T | t .C | 4000 | t .F | 7500 |
| N | n .C | 1300 | n .F | 2300 |
| PL-II | PL2C | 1390 | PL2F | 2500 |
| C (W/Re5-26) | c .C | 2315 | c .F | 4200 |
| | pt .C | 8500 | pt .F | 9999 |
| Pt100 | pt .C | 850 | pt .F | 1500 |
| | Jpt .C | 5000 | Jpt .F | 9000 |
| JPt100 | Jpt .C | 500 | Jpt .F | 900 |
| | 4 to 20mA DC | 420A | 420A | |
| 0 to 20mA DC | 020A | 020A | | |
| 0 to 1V DC | 0 18 | Scaling high limit value | 0 18 | Scaling high limit value |
| 0 to 5V DC | 0 58 | | 0 58 | |
| 1 to 5V DC | 1 58 | | 1 58 | |
| 0 to 10V DC | 0 108 | | 0 108 | |

(Table 5-1)

5.1 Setup flowchart

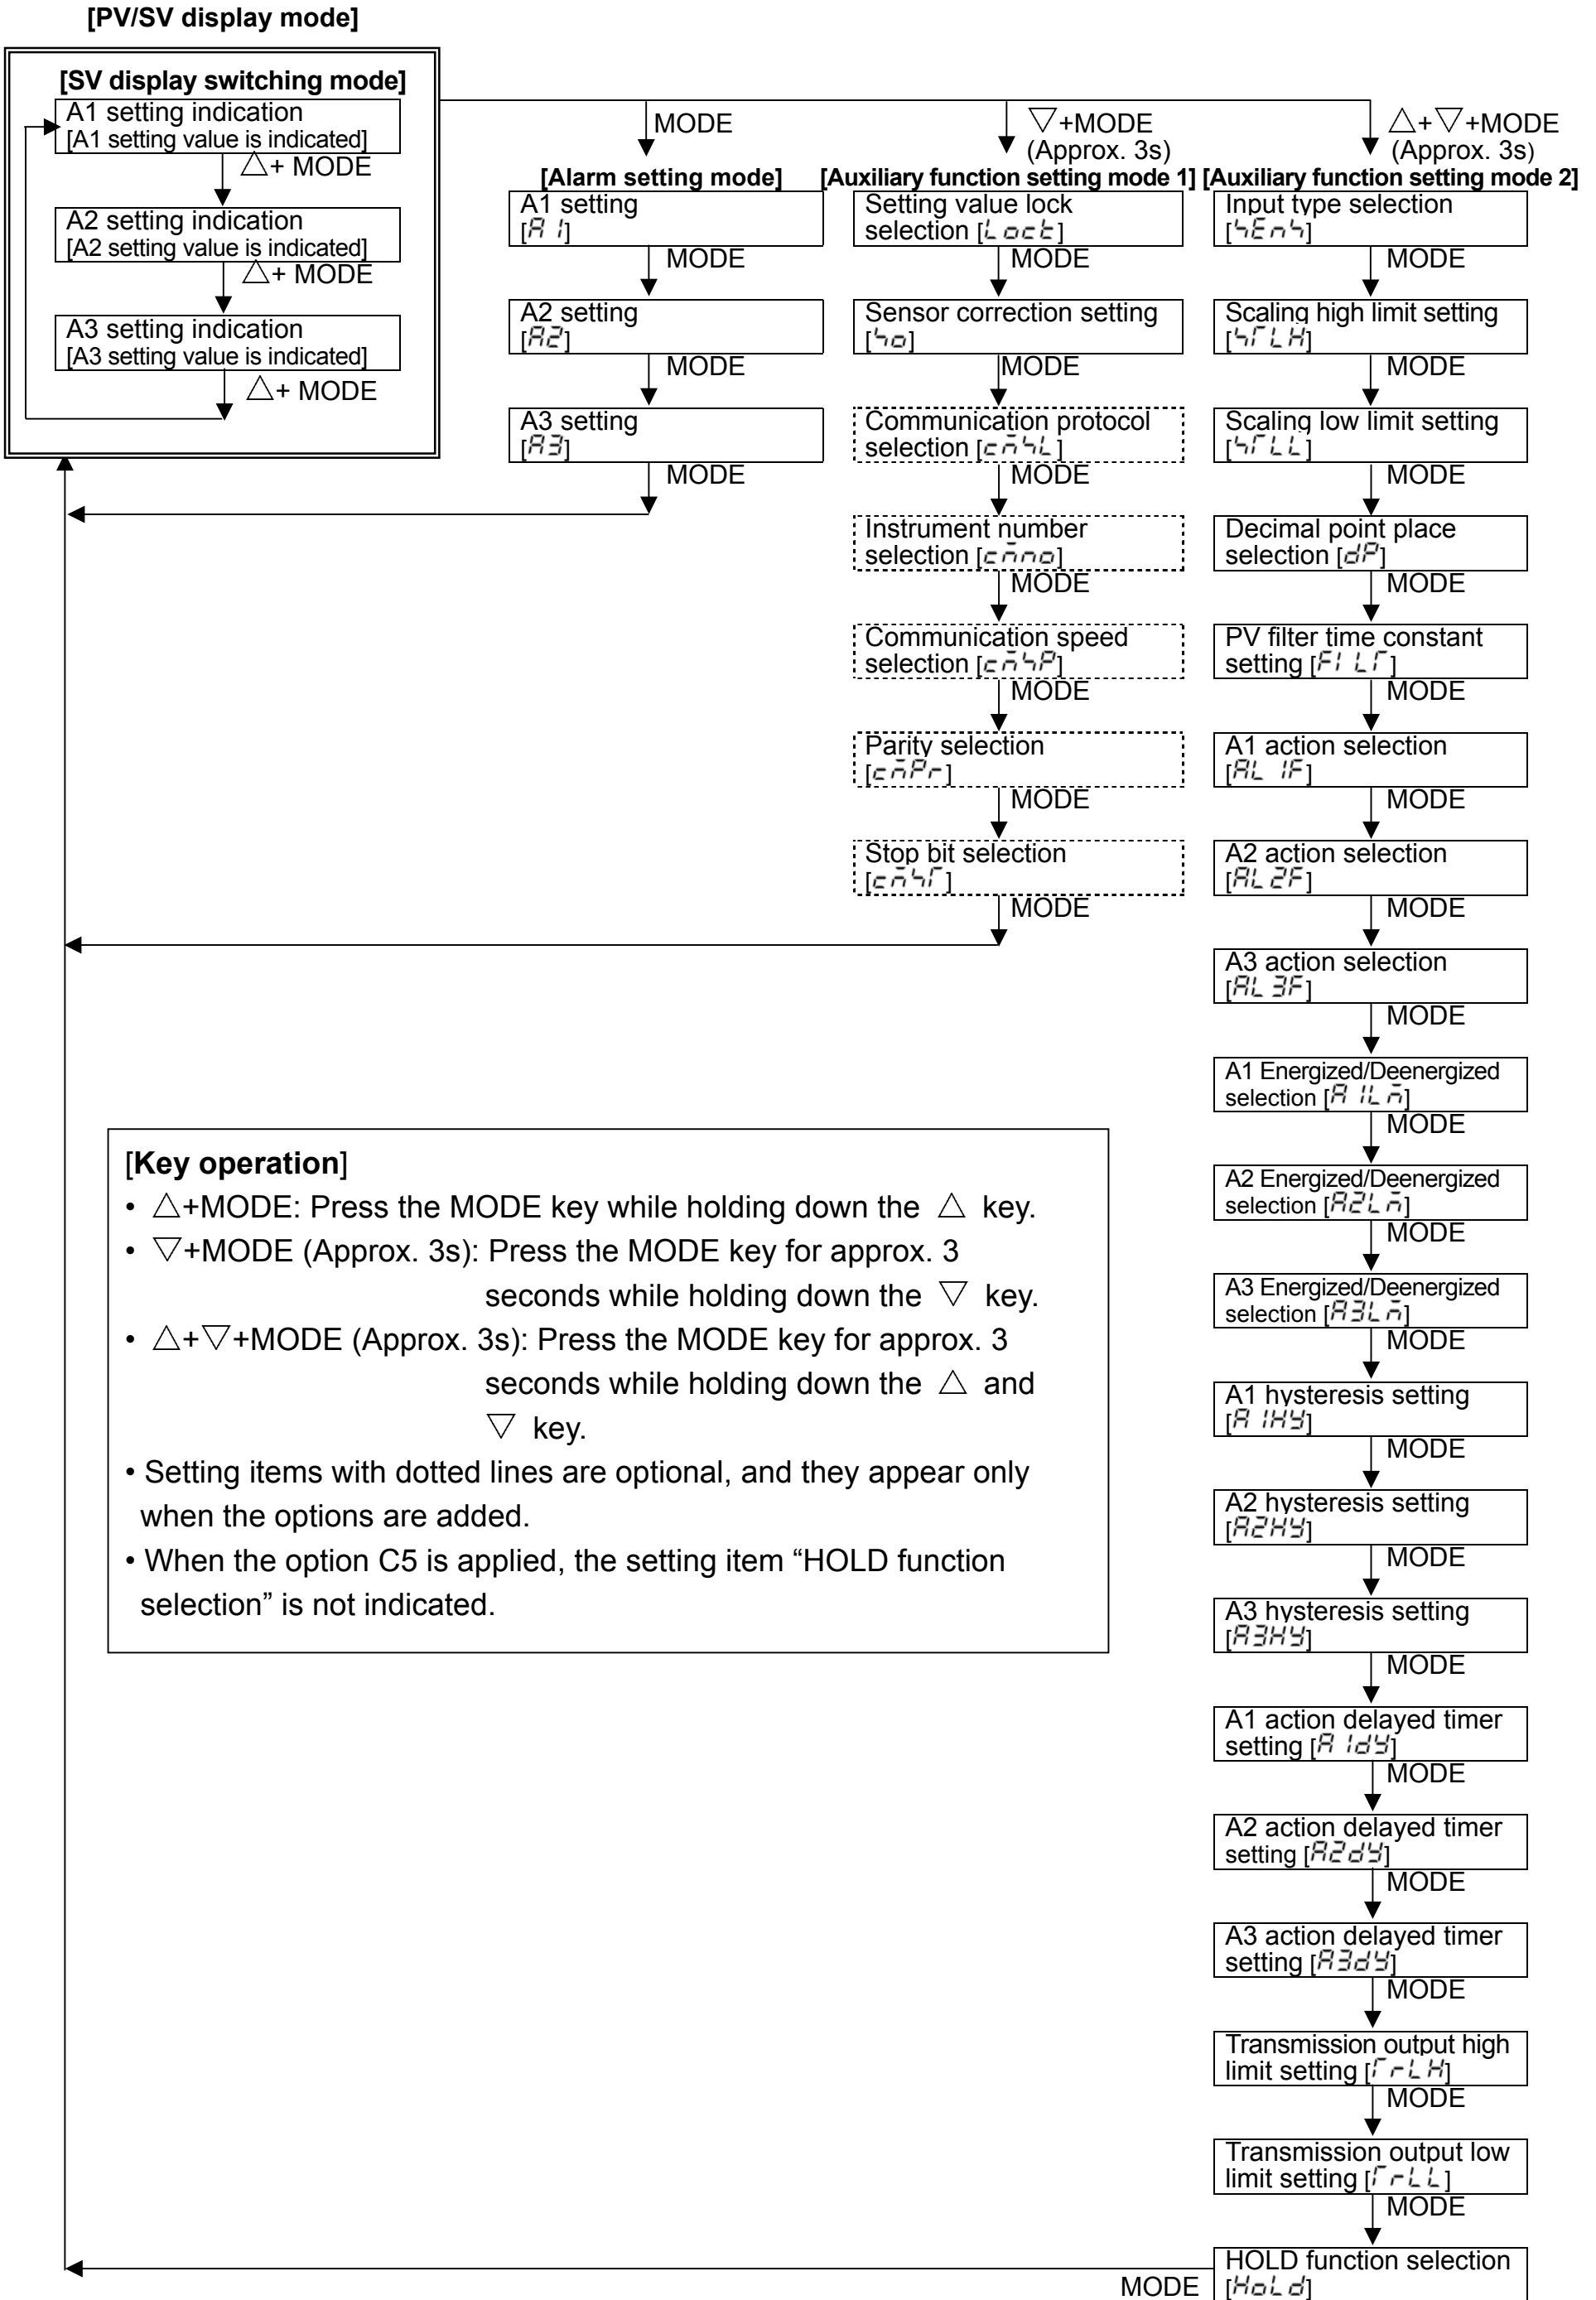

5.2 Alarm setting mode

| Character | Name, Function, Setting range | Default value |
|-----------|---|---------------|
| <i>A1</i> | A1 setting <ul style="list-style-type: none"> • Sets A1 output action point. • Not available if No alarm action is selected in A1 action selection. • Refer to (Table 5.2-1). | 0°C |
| <i>A2</i> | A2 setting <ul style="list-style-type: none"> • Sets A2 output action point. • Not available if the option Isolated power output is applied, or if No alarm action is selected during A2 action selection. • Refer to (Table 5.2-1). | 0°C |
| <i>A3</i> | A3 setting <ul style="list-style-type: none"> • Sets A3 output action point. • Not available if No alarm action or High/Low limit range alarm is selected during A3 action selection. • Refer to (Table 5.2-1). | 0°C |

(Table 5.2-1)

| Alarm action type | Setting range |
|-------------------------------|---|
| High limit alarm | Input range low limit to input range high limit value |
| Low limit alarm | Input range low limit to input range high limit value |
| High limit alarm with standby | Input range low limit to input range high limit value |
| Low limit alarm with standby | Input range low limit to input range high limit value |
| High/Low limit range alarm *1 | None |

- The placement of the decimal point follows the selection or input rating.
 - When input has a decimal point, negative lower limit setting value is -199.9, and positive upper limit setting value is 999.9.
 - Setting range of DC current and DC voltage inputs: Scaling low limit to scaling high limit value.
- *1: High/Low limit range alarm is available only for A3. If High/Low limit range alarm is selected, the setting items which are related to A3 (A3 setting, A3 action Energized/Deenergized selection, A3 hysteresis setting, A3 action delayed timer setting) will not be indicated.

5.3 SV display switching mode

| Name, Function | Default value |
|---|---------------|
| A1 setting value indication <ul style="list-style-type: none"> • A1 setting value is indicated on the SV display, and A1 setting indicator lights up. • Not available if No alarm action is selected during A1 action selection. | 0°C |
| A2 setting value indication <ul style="list-style-type: none"> • A2 setting value is indicated on the SV display, and A2 setting indicator lights up. • Not available if the option Isolated power output is applied, or if No alarm action is selected during A2 action selection. | 0°C |
| A3 setting value indication <ul style="list-style-type: none"> • A3 setting value is indicated on the SV display, and A3 setting indicator lights up. • Not available if No alarm action is selected during A3 action selection, or if High/Low limit range alarm is selected. | 0°C |

5.4 Auxiliary function setting mode 1

| Character | Name, Function, Setting range | Default value |
|-------------|---|-----------------|
| <i>Lock</i> | Setting value lock selection <ul style="list-style-type: none"> • Locks the setting values to prevent setting errors. The setting item to be locked depends on the selection. • --- (Unlock): All setting values can be changed. • <i>Loc1</i> (Lock 1): None of the setting values can be changed. • <i>Loc2</i> (Lock 2): Only main setting value can be changed. • <i>Loc3</i> (Lock 3): All setting values can be changed. However, do not change the setting items in the Auxiliary function setting mode 2. They return to their former value after power is turned off because they are not saved in the non-volatile memory. | Unlock |
| <i>Co</i> | Sensor correction setting <ul style="list-style-type: none"> • Sets the correction value for the sensor. • Setting range: -100.0 to 100.0°C (°F), or -1000 to 1000 | 0.0°C |
| <i>cnL</i> | Communication protocol selection <ul style="list-style-type: none"> • Selects the communication protocol. • Available only when the option Serial communication is applied. • Shinko protocol: <i>cnL</i>. Modbus ASCII mode: <i>nodA</i>, Modbus RTU mode: <i>nodr</i> | Shinko protocol |

| | | |
|-------------|--|---------|
| <i>cñno</i> | Instrument number setting <ul style="list-style-type: none"> • Sets the instrument number individually to each instrument when communicating by connecting plural instruments in serial communication. • Available only when the option Serial communication is added. • Setting range: 0 to 95 | 0 |
| <i>cñ4P</i> | Communication speed selection <ul style="list-style-type: none"> • Selects a speed to be equal to that of the host computer. • Available only when the option Serial communication is added. • 2400bps: <i>24</i>, 4800bps: <i>48</i>, 9600bps: <i>96</i>, 19200bps: <i>192</i> | 9600bps |
| <i>cñPr</i> | Parity selection <ul style="list-style-type: none"> • Selects the parity. • Not available when the option Serial communication is not added or when Shinko protocol is selected during the Communication protocol selection. • No parity: <i>none</i>, Even parity: <i>EBEn</i>, Odd parity: <i>odd</i> | Even |
| <i>cñ4I</i> | Stop bit selection <ul style="list-style-type: none"> • Selects the stop bit. • Not available when the option Serial communication is not added or when Shinko protocol is selected during the Communication protocol selection. • Setting range: 1, 2 | 1 |

5.5 Auxiliary function setting mode 2

| Character | Name, Function, Setting range | Default value | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--------------|--|-----------------------|---------------------------------|---|-----------------------------|--|--------------------------------|--|--------------------------------|---|-----------------------------|---|-----------------------------|---|--------------------------|---|--------------------------|---|--------------------------|---|--------------------------|---|--------------------------|---|--------------------------|---|----------------------------|---|-----------------------------|---|-------------------------------|---|-------------------------------|---|-----------------------------|---|-----------------------------|-------|---------------------------|-------|---------------------------|--------------|--------------------------|--------------|--------------------------|-------|--------------------------------|-------|--------------------------------|--------|---------------------------------|--------|---------------------------------|-------|-----------------------------|-------|-----------------------------|--------|------------------------------|--------|------------------------------|--------------|----------------------------|--|--|--------------|----------------------------|--|--|------------|----------------------------|--|--|------------|----------------------------|--|--|------------|----------------------------|--|--|-------------|-----------------------------|--|--|--|
| <i>4En4</i> | Input type selection <ul style="list-style-type: none"> • The input type can be selected from thermocouple (10 types), RTD (2 types), DC current (2 types) and DC voltage (4 types), and the unit °C/°F can be selected as well. • When changing the input from DC voltage to other inputs, remove the sensor connected to this instrument first, then change for the input. If the input is changed with the sensor connected, the input circuit may break. | K (-200 to 1370°C) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <table border="0"> <tr> <td>K</td> <td>-200 to 1370°C: <i>t C</i></td> <td>K</td> <td>-320 to 2500 °F: <i>t F</i></td> </tr> <tr> <td></td> <td>-199.9 to 400.0°C: <i>t .C</i></td> <td></td> <td>-199.9 to 750.0°F: <i>t .F</i></td> </tr> <tr> <td>J</td> <td>-200 to 1000 °C: <i>J C</i></td> <td>J</td> <td>-320 to 1800 °F: <i>J F</i></td> </tr> <tr> <td>R</td> <td>0 to 1760 °C: <i>r C</i></td> <td>R</td> <td>0 to 3200 °F: <i>r F</i></td> </tr> <tr> <td>S</td> <td>0 to 1760 °C: <i>s C</i></td> <td>S</td> <td>0 to 3200 °F: <i>s F</i></td> </tr> <tr> <td>B</td> <td>0 to 1820 °C: <i>b C</i></td> <td>B</td> <td>0 to 3300 °F: <i>b F</i></td> </tr> <tr> <td>E</td> <td>-200 to 800 °C: <i>E C</i></td> <td>E</td> <td>-320 to 1500 °F: <i>E F</i></td> </tr> <tr> <td>T</td> <td>-199.9 to 400.0°C: <i>T C</i></td> <td>T</td> <td>-199.9 to 750.0°F: <i>T F</i></td> </tr> <tr> <td>N</td> <td>-200 to 1300 °C: <i>n C</i></td> <td>N</td> <td>-320 to 2300 °F: <i>n F</i></td> </tr> <tr> <td>PL-II</td> <td>0 to 1390 °C: <i>PL2C</i></td> <td>PL-II</td> <td>0 to 2500 °F: <i>PL2F</i></td> </tr> <tr> <td>C (W/Re5-26)</td> <td>0 to 2315 °C: <i>c C</i></td> <td>C (W/Re5-26)</td> <td>0 to 4200 °F: <i>c F</i></td> </tr> <tr> <td>Pt100</td> <td>-199.9 to 850.0°C: <i>Pt C</i></td> <td>Pt100</td> <td>-199.9 to 999.9°F: <i>Pt F</i></td> </tr> <tr> <td>JPt100</td> <td>-199.9 to 500.0°C: <i>JPt C</i></td> <td>JPt100</td> <td>-199.9 to 900.0°F: <i>JPt F</i></td> </tr> <tr> <td>Pt100</td> <td>-200 to 850 °C: <i>Pt C</i></td> <td>Pt100</td> <td>-300 to 1500°F: <i>Pt F</i></td> </tr> <tr> <td>JPt100</td> <td>-200 to 500 °C: <i>JPt C</i></td> <td>JPt100</td> <td>-300 to 900 °F: <i>JPt F</i></td> </tr> <tr> <td>4 to 20mA DC</td> <td>-1999 to 9999: <i>420A</i></td> <td></td> <td></td> </tr> <tr> <td>0 to 20mA DC</td> <td>-1999 to 9999: <i>020A</i></td> <td></td> <td></td> </tr> <tr> <td>0 to 1V DC</td> <td>-1999 to 9999: <i>0 1V</i></td> <td></td> <td></td> </tr> <tr> <td>0 to 5V DC</td> <td>-1999 to 9999: <i>0 5V</i></td> <td></td> <td></td> </tr> <tr> <td>1 to 5V DC</td> <td>-1999 to 9999: <i>1 5V</i></td> <td></td> <td></td> </tr> <tr> <td>0 to 10V DC</td> <td>-1999 to 9999: <i>0 10V</i></td> <td></td> <td></td> </tr> </table> | K | -200 to 1370°C: <i>t C</i> | K | -320 to 2500 °F: <i>t F</i> | | -199.9 to 400.0°C: <i>t .C</i> | | -199.9 to 750.0°F: <i>t .F</i> | J | -200 to 1000 °C: <i>J C</i> | J | -320 to 1800 °F: <i>J F</i> | R | 0 to 1760 °C: <i>r C</i> | R | 0 to 3200 °F: <i>r F</i> | S | 0 to 1760 °C: <i>s C</i> | S | 0 to 3200 °F: <i>s F</i> | B | 0 to 1820 °C: <i>b C</i> | B | 0 to 3300 °F: <i>b F</i> | E | -200 to 800 °C: <i>E C</i> | E | -320 to 1500 °F: <i>E F</i> | T | -199.9 to 400.0°C: <i>T C</i> | T | -199.9 to 750.0°F: <i>T F</i> | N | -200 to 1300 °C: <i>n C</i> | N | -320 to 2300 °F: <i>n F</i> | PL-II | 0 to 1390 °C: <i>PL2C</i> | PL-II | 0 to 2500 °F: <i>PL2F</i> | C (W/Re5-26) | 0 to 2315 °C: <i>c C</i> | C (W/Re5-26) | 0 to 4200 °F: <i>c F</i> | Pt100 | -199.9 to 850.0°C: <i>Pt C</i> | Pt100 | -199.9 to 999.9°F: <i>Pt F</i> | JPt100 | -199.9 to 500.0°C: <i>JPt C</i> | JPt100 | -199.9 to 900.0°F: <i>JPt F</i> | Pt100 | -200 to 850 °C: <i>Pt C</i> | Pt100 | -300 to 1500°F: <i>Pt F</i> | JPt100 | -200 to 500 °C: <i>JPt C</i> | JPt100 | -300 to 900 °F: <i>JPt F</i> | 4 to 20mA DC | -1999 to 9999: <i>420A</i> | | | 0 to 20mA DC | -1999 to 9999: <i>020A</i> | | | 0 to 1V DC | -1999 to 9999: <i>0 1V</i> | | | 0 to 5V DC | -1999 to 9999: <i>0 5V</i> | | | 1 to 5V DC | -1999 to 9999: <i>1 5V</i> | | | 0 to 10V DC | -1999 to 9999: <i>0 10V</i> | | | |
| K | -200 to 1370°C: <i>t C</i> | K | -320 to 2500 °F: <i>t F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -199.9 to 400.0°C: <i>t .C</i> | | -199.9 to 750.0°F: <i>t .F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| J | -200 to 1000 °C: <i>J C</i> | J | -320 to 1800 °F: <i>J F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| R | 0 to 1760 °C: <i>r C</i> | R | 0 to 3200 °F: <i>r F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| S | 0 to 1760 °C: <i>s C</i> | S | 0 to 3200 °F: <i>s F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | 0 to 1820 °C: <i>b C</i> | B | 0 to 3300 °F: <i>b F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E | -200 to 800 °C: <i>E C</i> | E | -320 to 1500 °F: <i>E F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| T | -199.9 to 400.0°C: <i>T C</i> | T | -199.9 to 750.0°F: <i>T F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| N | -200 to 1300 °C: <i>n C</i> | N | -320 to 2300 °F: <i>n F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL-II | 0 to 1390 °C: <i>PL2C</i> | PL-II | 0 to 2500 °F: <i>PL2F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C (W/Re5-26) | 0 to 2315 °C: <i>c C</i> | C (W/Re5-26) | 0 to 4200 °F: <i>c F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Pt100 | -199.9 to 850.0°C: <i>Pt C</i> | Pt100 | -199.9 to 999.9°F: <i>Pt F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| JPt100 | -199.9 to 500.0°C: <i>JPt C</i> | JPt100 | -199.9 to 900.0°F: <i>JPt F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Pt100 | -200 to 850 °C: <i>Pt C</i> | Pt100 | -300 to 1500°F: <i>Pt F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| JPt100 | -200 to 500 °C: <i>JPt C</i> | JPt100 | -300 to 900 °F: <i>JPt F</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 to 20mA DC | -1999 to 9999: <i>420A</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 20mA DC | -1999 to 9999: <i>020A</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 1V DC | -1999 to 9999: <i>0 1V</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 5V DC | -1999 to 9999: <i>0 5V</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 to 5V DC | -1999 to 9999: <i>1 5V</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 to 10V DC | -1999 to 9999: <i>0 10V</i> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>4FLH</i> | Scaling high limit setting <ul style="list-style-type: none"> • Sets scaling high limit value. • Available only for DC input • Setting range: Scaling low limit value to input range high limit value | 9999 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>4FLl</i> | Scaling low limit setting <ul style="list-style-type: none"> • Sets scaling low limit value. • Available only for DC input • Setting range: Input range low limit value to scaling high limit value | -1999 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>dP</i> | Decimal point place selection <ul style="list-style-type: none"> • Selects decimal point place. • Available only for DC inputs • No decimal point: <i>0000</i> 1 digit after decimal point: <i>0000</i> • 2 digits after decimal point: <i>00.00</i> 3 digits after decimal point: <i>000.00</i> | No decimal point | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | |
|-------------|---|-----------------|
| <i>F1LF</i> | PV filter time constant setting <ul style="list-style-type: none"> • Sets PV filter time constant. (If the value is set too large, it affects alarm action due to the delay of response) • Setting range: 0.0 to 10.0 seconds | 0.0 seconds |
| <i>RL1F</i> | A1 action selection <ul style="list-style-type: none"> • Selects an action for A1. No alarm action : - - - - High limit alarm : <i>H</i> High limit alarm with standby: <i>H</i> <i>u</i> Low limit alarm : <i>L</i> Low limit alarm with standby: <i>L</i> <i>u</i> | No alarm action |
| <i>RL2F</i> | A2 action selection <ul style="list-style-type: none"> • Selects an action for A2. • Not available if the option Isolated power output is added • Action selection and default value are the same as those of A1 action selection. | No alarm action |
| <i>RL3F</i> | A3 action selection <ul style="list-style-type: none"> • Selects an action for A3. No alarm action: - - - - High limit alarm : <i>H</i> Low limit alarm : <i>L</i> High limit alarm with standby : <i>H</i> <i>u</i> Low limit alarm with standby : <i>L</i> <i>u</i> High/Low limit range alarm : <i>u</i> <i>d</i> <ul style="list-style-type: none"> • High/Low limit range alarm is activated depending on A1 and A2 setting values. If both A1 and A2 are turned OFF, A3 is turned ON in combination with A1 High limit alarm (High limit alarm with standby) and A2 Low limit alarm (Low limit alarm with standby), or in combination with A1 Low limit alarm (Low limit alarm with standby) and A2 High limit alarm (High limit alarm with standby). • If High/Low limit range alarm is selected, A3 related setting items (A3 setting, A3 action Energized/Deenergized selection, A3 hysteresis setting, A3 action delayed timer setting) are not available. | No alarm action |
| <i>R1LA</i> | A1 action Energized/Deenergized selection <ul style="list-style-type: none"> • Selects Energized/Deenergized for A1. • Not available if No alarm action is selected in A1 action selection • Energized: <i>nonL</i> Deenergized: <i>rEBL</i> | Energized |
| <i>R2LA</i> | A2 action Energized/Deenergized selection <ul style="list-style-type: none"> • Selects Energized/Deenergized for A2. • Not available if the option Isolated power output is added or if No alarm action is selected during A2 action selection • Action selection and default value are the same as those of A1 action Energized/Deenergized selection. | Energized |
| <i>R3LA</i> | A3 action Energized/Deenergized selection <ul style="list-style-type: none"> • Selects Energized/Deenergized for A3. • Not available if No alarm action is selected in A3 action selection or if High/Low limit range alarm is selected. • Action selection and default value are the same as those of A1 action Energized/Deenergized selection. | Energized |
| <i>R1HY</i> | A1 hysteresis setting <ul style="list-style-type: none"> • Sets hysteresis for A1. • Not available if No alarm action is selected in A1 action selection • Setting range: 0.1 to 100.0°C(°F), or 1 to 1000 | 1.0°C |
| <i>R2HY</i> | A2 hysteresis setting <ul style="list-style-type: none"> • Sets hysteresis for A2. • Not available if the option Isolated power output is added or if No alarm action is selected during A2 action selection • Setting range: 0.1 to 100.0°C(°F), or 1 to 1000 | 1.0°C |
| <i>R3HY</i> | A3 hysteresis setting <ul style="list-style-type: none"> • Sets hysteresis for A3. • Not available if No alarm action is selected in A3 action selection or if High/Low limit range alarm is selected. • Setting range: 0.1 to 100.0°C(°F), or 1 to 1000 | 1.0°C |
| <i>R1dY</i> | A1 action delayed timer setting <ul style="list-style-type: none"> • Sets action delayed timer for A1. When setting time has passed after the input enters the alarm output range, the alarm is activated. <ul style="list-style-type: none"> • Not available if No alarm action is selected in A1 action selection • Setting range: 0 to 9999 seconds | 0 seconds |

| | | | | | | | | | | | | |
|------------------|---|-----------|--|-----------|--|------------------|--|------------------|--|----------|--|--------|
| <i>A2d4</i> | A2 action delayed timer setting <ul style="list-style-type: none"> Sets action delayed timer for A2. When setting time has passed after the input enters the alarm output range, the alarm is activated. Not available if the option Isolated power output is added or if No alarm action is selected during A2 action selection Setting range: 0 to 9999 seconds | 0 seconds | | | | | | | | | | |
| <i>A3d4</i> | A3 action delayed timer setting <ul style="list-style-type: none"> Sets action delayed timer for A3. When setting time has passed after the input enters the alarm output range, the alarm is activated. Not available if No alarm action is selected in A3 action selection or if High/Low limit range alarm is selected. Setting range: 0 to 9999 seconds | 0 seconds | | | | | | | | | | |
| <i>rLH</i> | Transmission output high limit setting <ul style="list-style-type: none"> Sets the transmission output high limit value. Standard Transmission output: <table border="1" style="width: 100%;"> <tr> <td>4-20mA DC</td> <td>Corresponds to the value at 20mA DC output</td> </tr> </table> Optional Transmission output: <table border="1" style="width: 100%;"> <tr> <td>0-20mA DC</td> <td>Corresponds to the value at 20mA DC output</td> </tr> <tr> <td>0-1V DC</td> <td>Corresponds to the value at 1V DC output</td> </tr> <tr> <td>0-5V DC, 1-5V DC</td> <td>Corresponds to the value at 5V DC output</td> </tr> <tr> <td>0-10V DC</td> <td>Corresponds to the value at 0V DC output</td> </tr> </table> <ul style="list-style-type: none"> Setting range: Transmission output low limit value to input range high limit value | 4-20mA DC | Corresponds to the value at 20mA DC output | 0-20mA DC | Corresponds to the value at 20mA DC output | 0-1V DC | Corresponds to the value at 1V DC output | 0-5V DC, 1-5V DC | Corresponds to the value at 5V DC output | 0-10V DC | Corresponds to the value at 0V DC output | 1370°C |
| 4-20mA DC | Corresponds to the value at 20mA DC output | | | | | | | | | | | |
| 0-20mA DC | Corresponds to the value at 20mA DC output | | | | | | | | | | | |
| 0-1V DC | Corresponds to the value at 1V DC output | | | | | | | | | | | |
| 0-5V DC, 1-5V DC | Corresponds to the value at 5V DC output | | | | | | | | | | | |
| 0-10V DC | Corresponds to the value at 0V DC output | | | | | | | | | | | |
| <i>rLL</i> | Transmission output low limit setting <ul style="list-style-type: none"> Sets the transmission output low limit value. Standard Transmission output: <table border="1" style="width: 100%;"> <tr> <td>4-20mA DC</td> <td>Corresponds to the value at 4mA DC output</td> </tr> </table> Optional Transmission output: <table border="1" style="width: 100%;"> <tr> <td>0-20mA DC</td> <td>Corresponds to the value at 0mA DC output</td> </tr> <tr> <td>0-1V DC, 0-5V DC</td> <td>Corresponds to the value at 0V DC output</td> </tr> <tr> <td>0-10V DC</td> <td>Corresponds to the value at 1V DC output</td> </tr> </table> <ul style="list-style-type: none"> Setting range: Input range low limit value to transmission output high limit value | 4-20mA DC | Corresponds to the value at 4mA DC output | 0-20mA DC | Corresponds to the value at 0mA DC output | 0-1V DC, 0-5V DC | Corresponds to the value at 0V DC output | 0-10V DC | Corresponds to the value at 1V DC output | -200°C | | |
| 4-20mA DC | Corresponds to the value at 4mA DC output | | | | | | | | | | | |
| 0-20mA DC | Corresponds to the value at 0mA DC output | | | | | | | | | | | |
| 0-1V DC, 0-5V DC | Corresponds to the value at 0V DC output | | | | | | | | | | | |
| 0-10V DC | Corresponds to the value at 1V DC output | | | | | | | | | | | |
| <i>Hold</i> | HOLD function selection <ul style="list-style-type: none"> 3 types of HOLD function can be selected. Not available if the option Serial communication is added [How to use HOLD function] <ul style="list-style-type: none"> Connect terminals 14 and 17 to use HOLD function. HOLD: PV at the given time is held and indicated. Peak HOLD: The renewed maximum PV is indicated. Bottom HOLD: The renewed minimum PV is indicated. | HOLD | | | | | | | | | | |

Sensor correction function

This corrects the input value from the sensor. When a sensor cannot be set at a location where control is desired, the sensor measuring temperature may deviate from the temperature in the controlled location. When controlling with plural JIR-301-M units, sometimes the measured temperatures (input value) do not concur with the same setting value due to difference in sensor accuracy or dispersion of load capacities. In such a case, the control can be set at the desired temperature by adjusting the input value of sensors.

Energized/Deenergized


When [alarm action energized] is selected, A1 (A2, A3) output (between terminals 7-8, 9-10, 12-13) is conducted (ON) while A1 (A2, A3) action indicator is lit.

A1 (A2, A3) output is not conducted (OFF) while A1 (A2, A3) action indicator is not lit.

When [alarm action deenergized] is selected, A1 (A2, A3) output (between terminals 7-8, 9-10, 12-13) is not conducted (OFF) while A1 (A2, A3) action indicator is lit.


A1 (A2, A3) output is conducted (ON) while A1 (A2, A3) action indicator is not lit.

High limit alarm (when Energized is set)

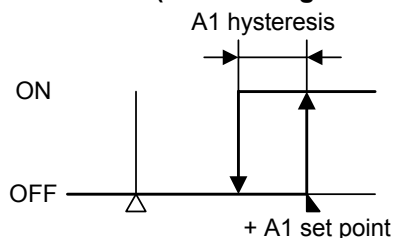

(Fig.5.5-1)

High limit alarm (when Deenergized is set)

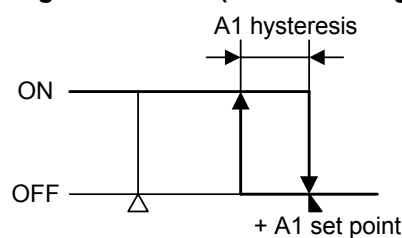

(Fig.5.5-2)

6. Running

After the JIR-301-M has been mounted to the control panel and wiring is complete, it can be started in the following manner.

(1) Turn the power supply to the JIR-301-M ON.

Turn the power supply to the JIR-301-M ON.

- For approx. 3s after the power is switched ON, the sensor input character and the temperature unit are indicated on the PV display and input range high limit value is indicated on the SV display. See (Table 5-1).

(If any other value has been set during the Scaling high limit setting, the set value is indicated on the SV display)

During this time, all outputs and LED indicators are in an OFF status.

- After that, input value is indicated on the PV display, and alarm setting value is indicated on the SV display.

(2) Input each setting value.

Input each setting value, referring to “5. Setup”.

7. Alarm action explanation

7.1 High limit alarm and Low limit alarm action


| | High limit alarm | Low limit alarm |
|--------------|-------------------------------|------------------------------|
| Alarm action | | |
| Alarm output | | |
| | High limit alarm with standby | Low limit alarm with standby |
| Alarm action | | |
| Alarm output | | |

- : A1 output terminals between 7 and 8 is connected.
- : A1 output terminals between 7 and 8 is connected or disconnected.
- : A1 output terminals between 7 and 8 is disconnected.
- : Standby functions in this section.

Use terminals 9 and 10 for A2 output, and use terminals 12 and 13 for A3 output.

A1, A2 and A3 action indicators turn on when their output terminals are connected, and turn off when their output terminals are disconnected.

7.2 High/low limit range alarm action (only for A3)

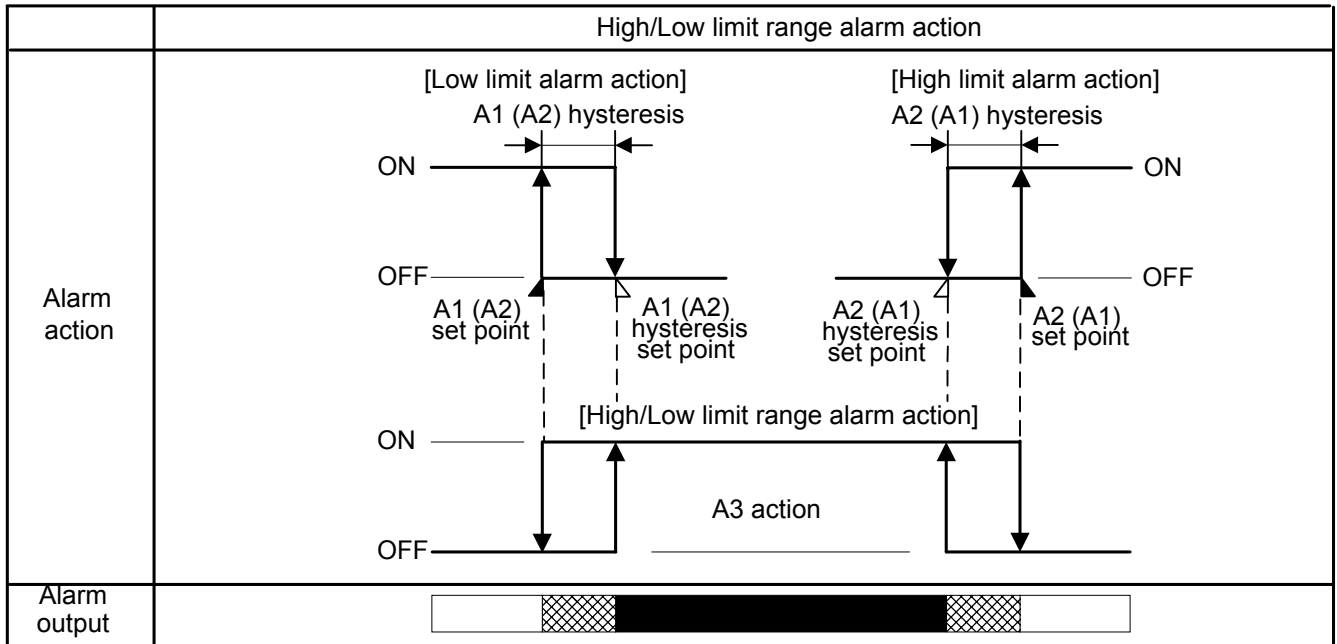

A3 High/low limit range alarm is activated depending on the status of A1 and A2 action indicators (when both A1 and A2 are OFF, A3 is ON).

So when standby function, hysteresis and delayed timer for A1 and A2 is set, be careful about the A3 action point.

Note

- If A1 or A2 standby function is selected and while A1 or A2 standby functions, A3 is ON.
- When A1 or A2 hysteresis is increased, A3 ON span is decreased.
- When A1 or A2 delayed timer setting (time) is increased, A3 ON time is increased.
- If A1 or A2 delayed timer (time) is set and while A1 or A2 delayed timer is working, A3 is ON.

: A1 output terminals between 7 and 8 are disconnected, A2 output terminals between 9 and 10 are disconnected and A3 output terminals between 12 and 13 are connected.

: A1 output terminals between 7 and 8, A2 output terminals between 9 and 10 and A3 output terminals between 12 and 13 are connected or disconnected.

: A1 output terminals between 7 and 8 are connected, A2 output terminals between 9 and 10 are connected and A3 output terminals between 12 and 13 are disconnected.

8. Specifications

8.1 Standard specifications

Mounting method : Flush

Setting method : Input system using membrane sheet key

Display PV display : Red LED 4 digits, character size 16 x 7.2 mm (H x W)

SV display : Green LED 4 digits, character size 10 x 4.8 mm (H x W)

Accuracy (Setting and Indication):

Thermocouple : Within $\pm 0.2\%$ of each input span ± 1 digit, or within $\pm 2^\circ\text{C}$ (4°F), whichever is greater

However R, S inputs, 0 to 200°C (400°F): Within $\pm 6^\circ\text{C}$ (12°F)

B input, 0 to 300°C (600°F): Accuracy is not guaranteed.

K, J, E, T, N inputs, less than 0°C (32°F): Within $\pm 0.4\%$ of each input span ± 1 digit

RTD : Within $\pm 0.1\%$ of each input span ± 1 digit, or within $\pm 1^\circ\text{C}$ (2°F), whichever is greater

DC current : Within $\pm 0.2\%$ of each input span ± 1 digit

DC voltage : Within $\pm 0.2\%$ of each input span ± 1 digit

Input sampling period : 0.25 seconds

Input Thermocouple : K, J, R, S, B, E, T, N, PL-II, C (W/Re5-26) External resistance, 100Ω or less (However, B input: External resistance, 40Ω or less)

RTD : Pt100, JPt100, 3-wire system
Allowable input lead wire resistance (10Ω or less per wire)

DC current : 0 to 20mA DC, 4 to 20mA DC
 Input impedance: External shunt resistor 50Ω
 Allowable input current (50mA or less)

DC voltage : 0 to 1V DC Input impedance (1MΩ or greater)
 Allowable input voltage (5V or less)
 Allowable signal source resistance (2kΩ or less)

: 0 to 5V DC, 1 to 5V DC, 0 to 10V DC Input impedance (100kΩ or greater)
 Allowable input voltage (15V or less)
 Allowable signal source resistance (100Ω or less)

A1, A2 output

The alarm action point is set by the absolute value.
 If the input exceeds the action point, alarm output turns on or off corresponding to the alarm type and Energized/Deenergized selection.

Action : ON/OFF action
 Hysteresis : 0.1 to 100.0°C (°F), or 1 to 1000
 (The placement of the decimal point follows the selection)
 Output : Relay contact 1a
 Control capacity, 3A 250V AC (resistive load)
 Electric life, 100,000 times

A3 output

The alarm action point is set by the absolute value.
 If the input exceeds the action point, the alarm output turns on or off corresponding to the alarm type and Energized/Deenergized selection.

The alarm action can be selected from a choice of: No alarm action, High limit alarm, Low limit alarm, High limit alarm with standby, Low limit alarm with standby and High/Low limit range alarm.

However, High/Low limit range alarm can be selected when A1 High limit alarm (High limit alarm with standby) and A2 Low limit alarm (Low limit alarm with standby) are combined, or when A1 Low limit alarm (Low limit alarm with standby) and A2 High limit alarm (High limit alarm with standby) are combined.

Action : ON/OFF action
 Hysteresis : 0.1 to 100.0°C (°F), or 1 to 1000
 (The placement of the decimal point follows the selection)
 Output : Relay contact 1a
 Control capacity, 3A 250V AC (resistive load)
 Electric life, 100,000 times

Transmission output

The input value is converted in analog every 0.25 seconds, and it is outputted in DC current.
 (When using the transmission output as an input for other instruments, check that the input impedance of these instruments is smaller than the maximum load resistance of the transmission output.)

Resolution : 1/12000
 DC current : 4 to 20mA DC (load resistance, max. 500Ω)
 Output accuracy: Within ±0.3% of output span


Power supply: 100 to 240V AC 50/60Hz, 24V AC/DC 50/60Hz

Allowable voltage fluctuation range

100 to 240V AC : 85 to 264V AC
 24V AC/DC : 20 to 28V AC/DC

Power consumption: Approx. 10VA

Circuit isolation configuration

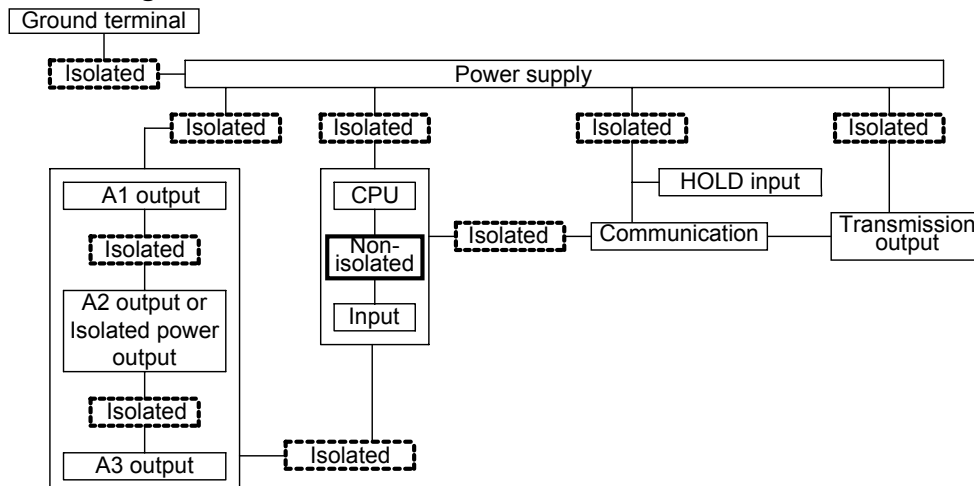

Isolation resistance : 10MΩ or greater at 500V DC

Dielectric strength : 1.5kV AC for 1minute between input terminal and ground terminal
 1.5kV AC for 1minute between input terminal and power terminal
 1.5kV AC for 1minute between power terminal and ground terminal
 1.5kV AC for 1minute between output terminal and ground terminal
 1.5kV AC for 1minute between output terminal and power terminal
 Output terminal comprises A1, A2 and A3 output terminals, transmission output terminal and communication terminal.

Ambient temperature : 0 to 50°C (32 to 122°F)
Ambient humidity : 35 to 85%RH (non-condensing)
Weight : Approx. 300g
External dimension : 96 x 48 x 100mm (W x H x D)
Material : Flame resistant resin (Case)
Color : Light gray (Case)

Attached function
[Setting value lock]
[Sensor correction]
[Input abnormality]

| Indication | Contents |
|---------------------|---|
| Flashes [^ - - -] | Overscale If the input value exceeds the indication range high limit value. |
| Flashes [- - - -] | Underscale If the input value goes under the indication range low limit value. |

Thermocouple and RTD inputs

| Input | Input range | Indication range |
|--------------|-------------------|-------------------|
| K, T | -199.9 to 400.0°C | -199.9 to 450.0°C |
| | -199.9 to 750.0°F | -199.9 to 850.0°F |
| K | -200 to 1370°C | -250 to 1420°C |
| | -320 to 2500°F | -370 to 2550°F |
| J | -200 to 1000°C | -250 to 1050°C |
| | -320 to 1800°F | -370 to 1850°F |
| R, S | 0 to 1760°C | -50 to 1810°C |
| | 0 to 3200°F | -50 to 3250°F |
| B | 0 to 1820°C | -50 to 1870°C |
| | 0 to 3300°F | -50 to 3350°F |
| E | -200 to 800°C | -250 to 850°C |
| | -320 to 1500°F | -370 to 1550°F |
| N | -200 to 1300°C | -250 to 1350°C |
| | -320 to 2300°F | -370 to 2350°F |
| PL-II | 0 to 1390°C | -50 to 1440°C |
| | 0 to 2500°F | -50 to 2550°F |
| C (W/Re5-26) | 0 to 2315°C | -50 to 2365°C |
| | 0 to 4200°F | -50 to 4250°F |
| Pt100 | -199.9 to 850.0°C | -199.9 to 900.0°C |
| | -200 to 850°C | -210 to 900°C |
| | -199.9 to 999.9°F | -199.9 to 999.9°F |
| | -300 to 1500°F | -318 to 1600°F |
| JPt100 | -199.9 to 500.0°C | -199.9 to 550.0°C |
| | -200 to 500°C | -206 to 550°C |
| | -199.9 to 900.0°F | -199.9 to 999.9°F |
| | -300 to 900°F | -312 to 1000°F |

DC current and voltage inputs

If input value exceeds Indication range high limit value, PV display flashes “ ^ - - - ”, and if input value goes under the Indication range low limit value, the PV display flashes “ - - - - ”.

Indication range : [Scaling low limit value – Scaling span x 1%] to [Scaling high limit value + Scaling span x 10%]

(If the input value is out of the range –1999 to 9999, the PV display flashes “ ^ - - - ” or “ - - - - ”)

DC input disconnection: When DC input is disconnected, PV display flashes “ - - - - ” for 4 to 20mA DC and 1 to 5V DC inputs, and “ ^ - - - ” for 0 to 1V DC input.

For 0 to 20mA DC, 0 to 5V DC and 0 to 10V DC inputs, the PV display indicates the corresponding value with which 0mA or 0V is inputted.

[Burnout]

When the thermocouple or RTD input is burnt out, PV display flashes “ - - - - ”.

[Self-diagnosis]

The CPU is monitored by a watchdog timer, and when any abnormal status is found on the CPU, the JIR-301-M is switched to warm-up status.

[Automatic cold junction temperature compensation] (Only thermocouple input type)

This detects the temperature at the connecting terminal between the thermocouple and the instrument, and always keeps it set to the same status as when the reference junction is located at 0°C (32°F).

[Power failure countermeasure]

The setting data is backed up in the non-volatile IC memory.

[Warm-up indication]

After the power supply to the instrument is turned on, the sensor input character and temperature unit are indicated on the PV display and rated scale high limit value is indicated on the SV display for 3 seconds.

For DC current and voltage inputs, the scaling high limit value is indicated.

[HOLD function]

The following HOLD functions can be selected by keypad.

HOLD : By connecting terminals 14 and 17, PV at that time is being held and indicated.

Peak HOLD : By connecting terminals 14 and 17, the renewed maximum PV is indicated.

Bottom HOLD: By connecting terminals 14 and 17, the renewed minimum PV is indicated.

Dust-proof/Drip-proof: IP66 (only for front part)

Accessories : Screw type mounting bracket 1 set
 Instruction manual 1 copy
 Unit label 1 label
 Terminal cover 1 piece (When the option TC is added)

8.2 Optional specifications**Specified transmission output (Option code: TA, TV)**

The input value is converted in analog every 0.25 seconds, and it is outputted in DC current or voltage.

Resolution : 1/12000

Output accuracy: Within $\pm 0.3\%$ of output span

DC current : 0 to 20mA DC (load resistance, max. 500 Ω)

DC voltage : 0 to 1V DC (load resistance, min. 100k Ω)

0 to 5V DC (load resistance, min. 500k Ω)

1 to 5V DC (load resistance, min. 500k Ω)

0 to 10V DC (load resistance, min. 1M Ω)

Serial communication (Option code: C5)

When this option is added, HOLD function is not available.

The following operations can be carried out from the external computer.

(1) Reading and setting of the various setting values

(2) Reading of the input value and action status

(3) Change of the functions

Communication interface : Based on EIA RS-485

Communication method : Half-duplex communication start stop synchronous

Communication speed : 2400, 4800, 9600, 19200bps (Selectable by keypad) (Default: 9600bps)

Parity : Even, Odd and No parity (Selectable by keypad) (Default: Even)

Stop bit : 1, 2 (Selectable by keypad) (Default: 1)

Communication protocol : Shinko protocol, Modbus RTU, Modbus ASCII (Selectable by keypad)

Connectable number of units : Maximum 31 units to 1 host computer

Communication error detection : Double detection by parity and checksum

Data format:

| Communication protocol | Shinko protocol | Modbus ASCII | Modbus RTU |
|------------------------|-----------------|------------------|----------------|
| Start bit | 1 | 1 | 1 |
| Data bit | 7 | 7 | 8 |
| Parity | Even | Selection (Even) | Selection (No) |
| Stop bit | 1 | Selection (1) | Selection (1) |

Data bit is automatically selected upon selecting the communication protocol.

(): Basic setting value

Note: When Shinko communication converter IF-300-C5 is used, Modbus protocol is not available.

Isolated power output (Option code: P24)

If this option is added, [A2] cannot be added.

Output voltage : $24 \pm 3V$ DC (When load current is 30mA)

Ripple voltage : Within 200mV (When load current is 30mA)

Maximum load current: 30mA

Color Black (Option code: BK)

Front panel frame and case: Black



Terminal cover (Option code: TC)

Electrical shock protection terminal cover

9. Troubleshooting

If any malfunctions occur, refer to the following items after checking the power supply to the JIR-301-M.

| Problem | Presumed cause and solution |
|---|--|
| <p>[- - - -] is flashing on the PV display.</p> | <ul style="list-style-type: none"> • Thermocouple, RTD or DC voltage (0 to 1V DC) input sensor is burnt out. Change each sensor. How to check whether the sensor is burnt out [Thermocouple] If the input terminal of the instrument is shorted, and if nearby room temperature is indicated, the instrument is likely to be operating normally, however the sensor may be burnt out. [RTD] If approx. 100Ω of resistance is connected to the input terminals between A-B of the instrument and between B-B is shorted, then if approximate 0°C (32°F) is indicated, the instrument normal is likely to be operating normally, however the sensor may be burnt out. [DC voltage (0 to 1V DC)] If the input terminal of the instrument is shorted, and if scaling low limit value is indicated, the instrument is likely to be operating normally, however the signal wire may be disconnected. • Check whether the input terminals of thermocouple, RTD or DC voltage (0 to 1V DC) are securely mounted to the instrument input terminals. Ensure that the sensor terminals are securely connected to the instrument input terminals. |
| <p>[- - - -] is flashing on the PV display.</p> | <ul style="list-style-type: none"> • Check whether input signal source for DC voltage (1 to 5V DC) or DC current (4 to 20mA DC) is disconnected. How to check whether the input signal wire is disconnected [DC voltage (1 to 5V DC)] If the input to the input terminals of the instrument is 1V DC and if scaling low limit value is indicated, the instrument is likely to be operating normally, however the signal wire may be disconnected. [DC current (4 to 20mA DC)] If the input to the input terminals of the instrument is 4mA DC and scaling low limit value is indicated, the instrument is likely to be operating normally, however the signal wire may be disconnected. • Check whether the input signal wire for DC voltage (1 to 5V DC) or DC current (4 to 20mA DC) is securely connected to the instrument input terminals. Ensure that the input signal wire is securely connected to the instrument input terminals. • Check whether the polarity of thermocouple or compensating lead wire is correct. Check whether codes (A, B, B) of the RTD agree with the instrument terminals. Ensure that they are wired properly. |

| | |
|--|--|
| <p>The PV display keeps indicating the value which was set during Scaling low limit setting.</p> | <ul style="list-style-type: none"> • Check whether the input signal source for DC voltage (0 to 5V DC, 0 to 10V DC) and DC current (0 to 20mA DC) is disconnected. How to check whether the input signal wire is disconnected [DC voltage (0 to 5V DC, 0 to 10V DC)] If the input to the input terminals of the instrument is 1V DC and the value corresponding to 1V DC is indicated, the instrument is likely to be operating normally, however the signal wire may be disconnected. [DC current (0 to 20mA DC)] If the input to the input terminals of the instrument is 1mA DC and the value corresponding to 1mA DC is indicated, the instrument is likely to be operating normally, however the signal wire may be disconnected. • Check whether the input lead wire terminals for DC voltage (0 to 5V DC, 0 to 10V DC) or DC current (0 to 20mA DC) are securely mounted to the instrument input terminals. |
| <p>The indication of the PV display is abnormal or unstable.</p> | <ul style="list-style-type: none"> • Check whether the sensor input or temperature unit (°C or °F) setting are correct. Select the sensor input and temperature unit (°C or °F) properly. • Sensor correcting value is unsuitable. Set it to a suitable value. • Check whether the specification of the sensor is correct. • AC leaks into the sensor circuit. Use an ungrounded type sensor. • There may be equipment that interferes with or makes noise near the JIR-301-M. Keep equipment that interferes with or makes noise away from the JIR-301-M. |
| <p>The PV display is indicating [Err 1].</p> | <ul style="list-style-type: none"> • Internal memory is defective. Contact our agency or us. |
| <p>The value on the PV display does not change.</p> | <ul style="list-style-type: none"> • Check whether HOLD function is working. Release the HOLD function. |
| <p>The values do not change by  or  key.</p> | <ul style="list-style-type: none"> • Setting value lock (Lock 1 or Lock 2) is selected. Release the lock selection. |

• For all other malfunctions, please contact our main office or dealers.

SHINKO TECHNOS CO.,LTD. OVERSEAS DIVISION

Reg. Office : 1-2-48, Ina, Minoo, Osaka, Japan
Mail Address: P.O.Box 17, Minoo, Osaka, Japan
URL : <http://www.shinko-technos.co.jp>
E-mail : overseas@shinko-technos.co.jp

Tel : 81-72-721-2781
Fax: 81-72-724-1760